

E I/O 远程扩展模块接线图及信号说明

输出		
针脚	逻辑号	通用信号
1	30040	OUT17
2	30041	OUT18
3	30042	OUT19
4	30043	OUT20
5	30044	OUT21
6	30045	OUT22
7	30046	OUT23
8	30047	OUT24
9	30050	OUT25
10	30051	OUT26
11	30052	OUT27
12	30053	OUT28
13	30054	OUT29
14	30055	OUT30
15	30056	OUT31
16	30057	OUT32
输入		
针脚	逻辑号	通用信号
1	20040	IN17
2	20041	IN18
3	20042	IN19
4	20043	IN20
5	20044	IN21
6	20045	IN22
7	20046	IN23
8	20047	IN24
9	20050	IN25
10	20051	IN26
11	20052	IN27
12	20053	IN28
13	20054	IN29
14	20055	IN30
15	20056	IN31
16	20057	IN32

